



SEEDER INSTRUCTIONS

1. Engine operation:

- Turn red knob on front to “ON”
- Top lever (Throttle) to left
- Middle lever (Choke) to left to start then over to right when running
- Lower lever (Fuel) to right
- Pull the rip cord if it does not start easily there is a problem.

2. Seed Adjustment:

- Set seeder adjustment disc on right handle to 8, this is a starting point. We like to see about 200 seeds per square foot, so if you want more seed increase the number, less decrease the number. While over your driveway or sidewalk start the engine and open the seed slots by pulling the lever towards the adjustment plate. This way you can visually see how much seed is dropping and increase or decrease the number accordingly.

3. Height adjustment:

- Set the height adjustment lever on the base deck near the front right tire to one, this is a starting point. The numbers do not mean anything except the higher the number the deeper the tines scratch. You want the tines to create ¼” cuts in the soil. Every yard is different. If you have bare dirt this is easy, but most lawns are partial dirt and grass. In grassy areas you may only cut through the thatch not reaching the dirt. Engage the tine bar at the top of the handles, check the depth of the cut and increase the number until you reach the desired height.

4. IMPORTANT NOTES:

- Seed adjustment is only an approximation. You will use more grass seed than seeding with a spreader.
- Remember to check the seed adjustment on pavement so not to waste seed.
- This machine is a Seeder not a Thatcher or Tiller. If you cut to deep into the soil the seed will not grow and there is a good probability the belt that engages the tines will come off the pulley.
- If a tine comes loose from underneath. Unbolt the tine using a 7/16” wrench and continue. This happens time to time.
- Fuel is full when going out. It should be full coming back.

5. Any problems call immediately 633-3551.